

ATLAS LANTERN

INSTALLATION GUIDE





WELCOME TO THE ATLAS LANTERN INSTALLATION GUIDE


This installation guide will ensure the quick and easy assembly of your Atlas lantern. It takes you through each stage of installation step by step, with sections on general installation, roof vent installation, bell rafter installation and hidden tie bar installation.

We recommend you spend a little time reading through this guide before you start, to give you an understanding of the roof structure, then follow each step carefully to avoid complications later.



LANTERN ILLUSTRATION


To help with installation, the main lantern components have been numbered and lettered. These correspond with the drawings found in your kit instructions, and will look like the image below. Please take care to follow the image in your kit, not the image below.

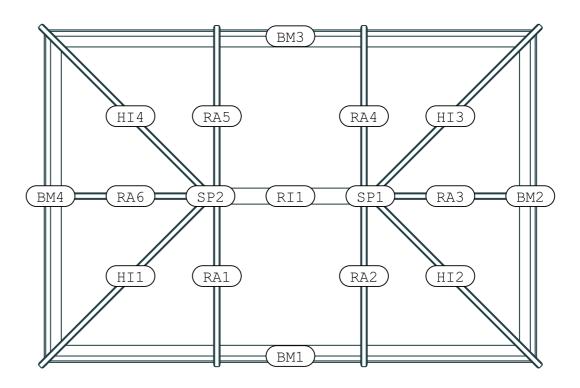


Screw Description	Location
	Screws for fixing pressure plates
REF 4.2 x 45mm	
	Screws are fixed through the ringbeam to join the ringbeams together at the corners
REF 4.2 x 25mm	
	Screws to fix the bottom of transom rafters to the ringbeam
REF 4.8 x 50mm	
	Screws to fix bottom of hip rafters
REF 4.2 x 25mm	

 $\mathbf{2}$

FIXED PITCH INSTRUCTION DETAIL

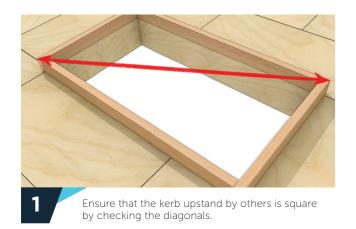


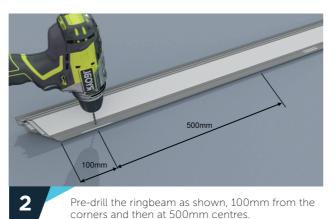








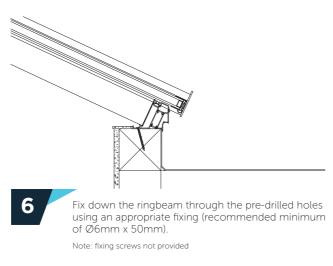

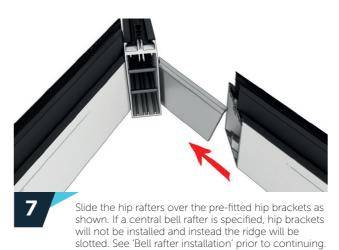










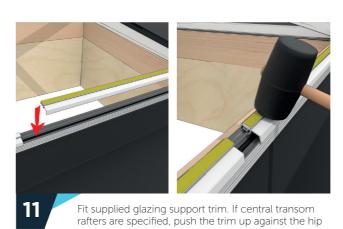

which will set the position of the transom.



Slightly unscrew the fixing in the transom rafter to release the connection bracket.

FIXED PITCH INSTRUCTION DETAIL




Lift transom rafter and offer the bracket up to the slot in the ridge at an angle. Insert the bracket and then rotate the rafter into position at the ringbeam.





Check that the rafter is square to the ringbeam. Fix the 4.8 x 50mm screw supplied centrally through the bottom of the transom rafter as shown to secure the rafter.

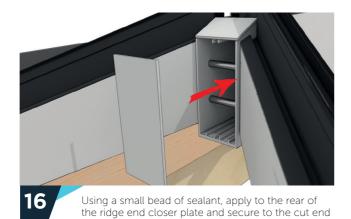

of the ridge as shown.

Apply a bead of sealant to glazing end closer and fit centrally to glass units.

Note: Always use the correct polymer sealant for self cleaning glass. Illustration shows underside of glass, please note, when fitting drip faces down.







Fit glazing around the roof following the roof plan and sit against the lower endcaps. If a roof vent has been specified, follow roof vent installation. Apply pressure to the adhesive of the glazing tape to secure the glass.



screws through the pre-drilled holes.

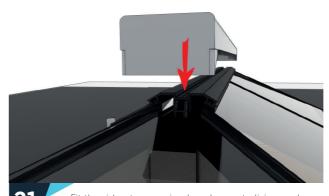

Fit the ridge top cap in place by centralising and applying pressure from one end to the other. A rubber mallet may be required.

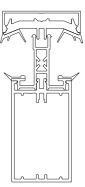


Fit hip and transom pressure plates by centralising, they will locate into the central channel on the rafter. Ensure that pressure plates are pushed up against the side of the ridge topcap.




Screw down into the rafter through the pre-drilled holes in the pressure plates using the 4.2 x 45mm screws. Repeat for all the rafters.


Note: Drill an additional 5mm hole and add a pressure plate screw. Always add a pressure plate screw through the pressure plate in line with the double-sided tape to help compress the glass to the tape.

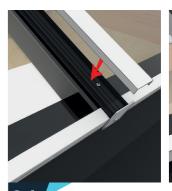


Fit all the rafter topcaps according to the correct cut length and roof plan position. Locate over the top of the pressure plate and push down. A rubber mallet may be required.

ADJUSTABLE RINGBEAM INSTRUCTION DETAIL

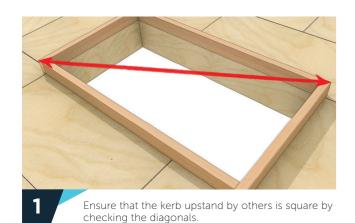


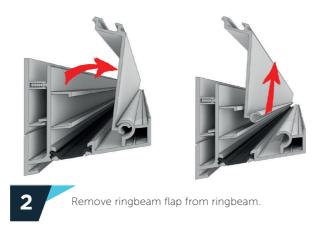


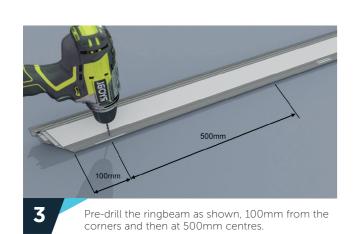






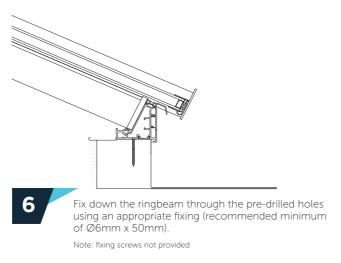

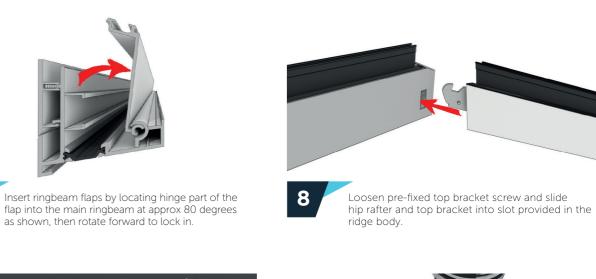

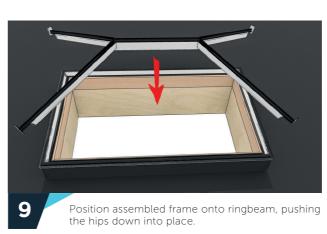







ADJUSTABLE RINGBEAM INSTRUCTION DETAIL




Lift transom rafter or jack rafter and offer the bracket up to the slot in the ridge or hip at an angle. Insert the bracket and then rotate the rafter into position at the ringbeam.




Use internal foamboards to space out rafter positions before fixing rafters to the ringbeam.




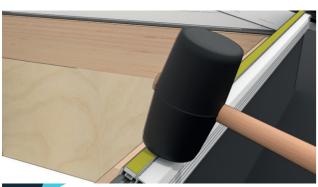

Fit supplied glazing support trim between rafters and tap on with a rubber mallet, then silicone foamboards to the ringbeam flap between the rafters.

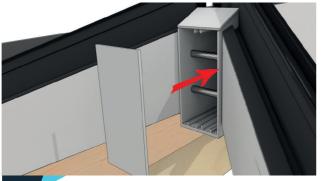

Using a small bead of sealant, apply to the rear of the ridge end closer plate and secure to the cut end of the ridge as shown.

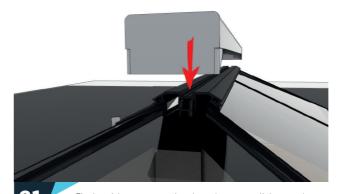


Fit glazing around the roof following the roof plan and

sit against the lower endcaps. If a roof vent has been

specified, follow roof vent installation. Apply pressure to the adhesive of the glazing tape to secure the glass.

Fit the ridge top cap in place by centralising and applying pressure from one end to the other. A rubber mallet may be required.

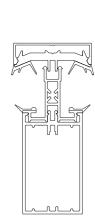


screws through the pre-drilled holes.

Fit the ridge pressure plate by centralising on the

ridge and then screwing down using the 4.2 x 45mm

Fit hip and transom pressure plates by centralising, they will locate into the central channel on the rafter. Ensure that pressure plates are pushed up against the side of the ridge topcap.

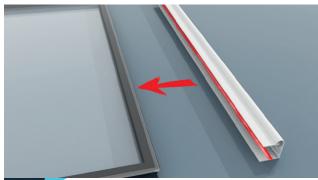


Apply a bead of sealant to glazing end closer and fit centrally to glass units.

Note: Always use the correct polymer sealant for self cleaning glass. Illustration shows underside of glass, please note, when fitting drip faces down.




Screw down into the rafter through the pre-drilled holes in the pressure plates using the 4.2 x 45mm screws. Repeat for all the rafters.

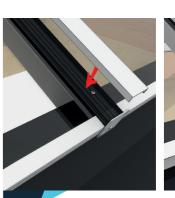

Fit all the rafter topcaps according to the correct cut length and roof plan position. Locate over the top of the pressure plate and push down. A rubber mallet may be required.




HIDDEN TIE BAR INSTRUCTION

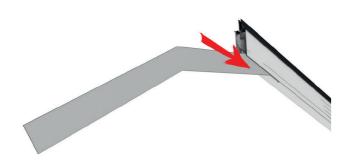


Insert tie bar bracket into the side of one of the central rafters.




2 Loosen retaining screw from transom connection bracket so that it can move freely and insert transom bracket into slot in the ridge.

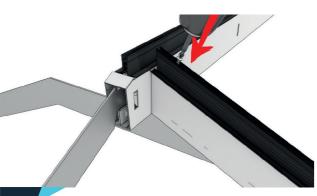

Re-tighten bracket retention screw to pull the joint tight.

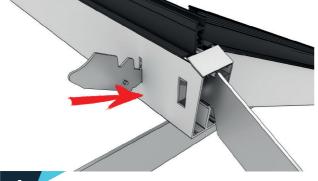

Insert the transom connection bracket into the slot in the opposite side of the ridge.

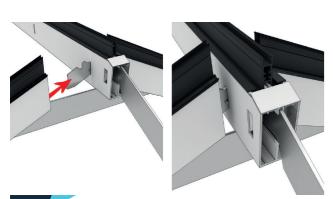

Slide the opposite transom rafter over the bracket and push against the ridge.




7 Locate the gusset plate over the tie bar.



BELL RAFTER INSTALLATION





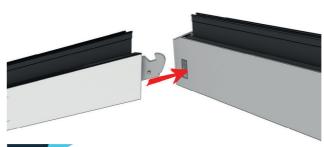



Loosen retention screws in hips and insert the connection brackets into the wider machined slots in the side of the ridge. Return to step 8, fitting the framework into the ringbeam, pushing down the hips to tighten the joints. Tighten retention screws.





Fix hips into ringbeam using the provided 4.2 x 25mm fixings on either side of the rafter as shown.


ROOF VENT INSTALLATION

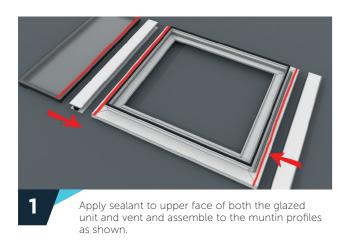

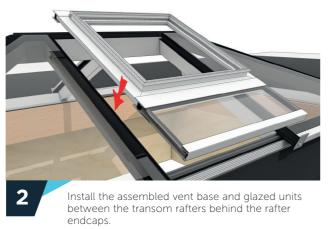


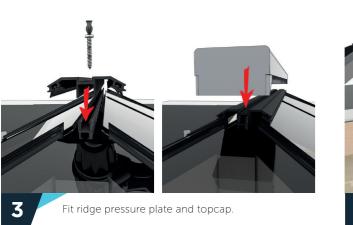

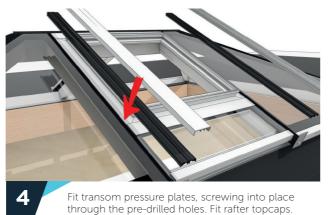


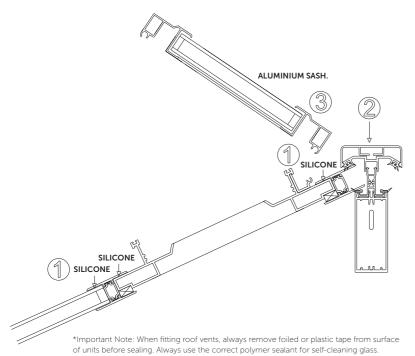



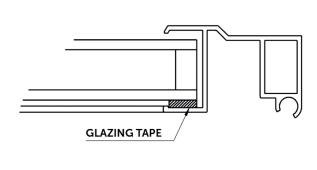

Remove protective film from the glazing tape on the sash profile.

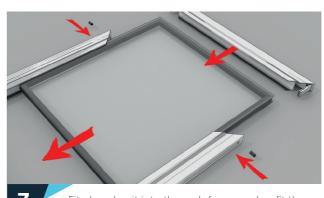



with the grub screws.




Starting from a corner, apply the wedge gasket to the opposite side of the vent sash (to the glazing tape), notching the corners to allow the gasket to fit tight into the corners of the framework.



Fit vent sash to the vent base by locating the channel in the sash profile into the 2 pivot profiles on either end of the vent base as shown. The sash should be offered at approximately 60° to engage correctly, then rotated down to lock in.


Locate and install the spindle or actuator, securing in place with the supplied fixings.

BOX TIE BAR INSTRUCTION

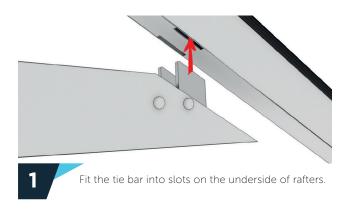






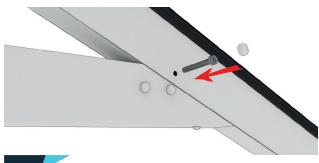

Using a 6mm bit, drill a hole through the rafter and tie bar brackets.





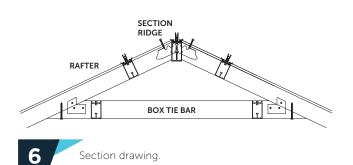

Clip on finishing D caps to complete A frame.

The information provided in this publication is provided "as is" on June 2022. Atlas Roofing may modify and change the information and specifications from time to time for a variety of reasons, without prior notice and updates will not be issued automatically. This information is not intended to have any legal effect, whether by the way of advice, representation or warranty (express or implied). All rights reserved. Copyright in this publication belongs to Atlas Roofing and all such copyright may not be used, sold, copied or reproduced in whole or part in any manner in any media to any person without prior consent. Copyright © 2022 Atlas Roofing. All rights reserved.